


Super Bass Extreme | Wall-Ceiling Connection

Page 1 of 1 |

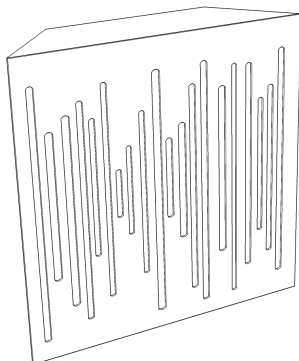

Required Apparatus:

- Super Bass Extreme (Panel)
- Vicoustic Flexi Glue
- 1 x Glue Gun
- 4 x SBE metal piece
- 12 x Screws (6 Vicoustic screws to SBE)
- 1 x Screwdriver

Installation Instructions:

Wall surfaces should be examined prior to installation, ensuring they are clean, smooth, and dry. If you have unpainted gypsum board surfaces, these should be primed with a drywall primer (or another material manufactured especially for the purpose), to equalize the absorption between the gypsum board face paper, joint compound, and skin coating materials. You should then apply the paint, and allow air circulation in order to dry the paint within the time frame specified by the paint manufacturer. Please ensure the paint is dry before installing the acoustic panel. Make sure the room has all the conditions necessary to receive the acoustic panels.


STEP 1

Install the SBE metal pieces in the panel. Place glue in the back of the SBE metal pieces and place them as shown in the image bellow. Fix the 3 (three) Vicoustic screws in each SBE metal piece to assure a complete and secure fixation.



STEP 2

Install the SBE metal pieces in the ceiling. Make sure you install the SBE metal pieces in the position you want the Super Bass Extreme to be fixed. Fix the 3 (three) screws in each SBE metal piece to assure a complete and secure fixation.

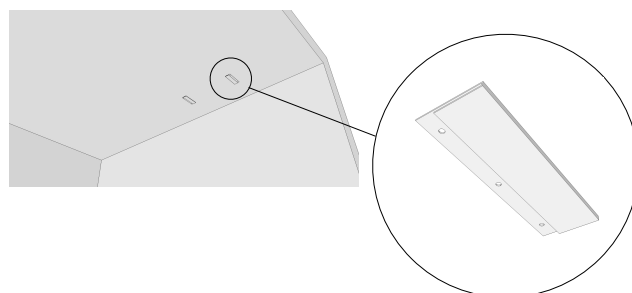


STEP 3

Place glue in the surface that will land in the wall.



STEP 4

Place the panel in the ceiling, sliding the SBE metal piece of the panel into the SBE metal piece in the ceiling. Slide the panel until it makes contact with the wall.

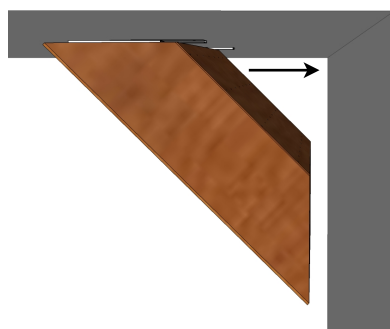

STEP 5

Slide the panel until it makes contact with the wall. Make some pressure and wait 15s. Remove slightly the panel (about 2 cm), wait 15s and then place again waiting 1 minute. Ensure the product stays fixed and stable.

